

## Aerosol Patching Lacquer Operation Manual

Before lacquering you should:

- Prepare painted surface, degrease the place for painting and cover other surfaces against dusting with means of masking tape and paper.
- Mix the paint in the package by shaking it in about one and a half minute.
- Make test spraying, to compare the compliance of paint colour with colour of repaired surface of element.
- Place two to three layers of paint and maintain about 2 minutes interval between placing subsequent layers, according to environmental conditions, this is temperature of environment.
- Placed layer of paint should be tack-free.
- Temperature for placing the paint should be 5C - 25C with regard to air humidity.
- When all paint in the aerosol package is not used, you should keep the package with spraying head downwards, then push the nozzle to clean the valve and spraying nozzle, until spray of gas emerges, this is about 2-3 seconds. Such activity prevents from drying the paint in aerosol nozzle and valve, therefore another use of paint for subsequent works will be enabled.